



FEP Film replacement

Please follow the steps below to replace the FEP Film.

Step 1: Remove screws from the Resin Vat

Remove the screws to detach the steel rings from the resin vat and to separate the steel rings and change the FEP Film.

Step 2: Replace the FEP Film

Put the new FEP film in-between the two steel rings.

Step 3: Make sure that the FEP Film is clean and tensioned properly

Before you screw the screws make sure that FEP is in a good condition.

Step 4: Install screws back

After replacing FEP in the correct place, screw the screws from the Resin Vat back and check if the FEP Film is tensioned properly.