

A Donaldson Company

A WORLD LEADER IN FUME EXTRACTION TECHNOLOGY

# FumeCAB 1000 iQ

**ELECTRONICS, PHARMACEUTICAL & MEDICAL** 

Last Updated on 02.02.2022





The complete cabinet fume extraction solution for a broad range of applications.

Partial enclosures are becoming the recommended extraction option for a variety of applications. Government bodies, including the in the HSE are now making direct reference through guidance documentation such as the HSG258 to their use.

The FumeCAB 1000 iQ integrated filtration system has been designed to comply with the latest regulations. It provides users with an extra depth of working space for taller applications.

BOFA's Intelligent Operating System (iQ) and ultra-bright slimline energy-saving LED lights come as standard making this system an ideal choice of fume extraction for a wide variety of applications.

More information about the Intelligent Operating System (iQ).

### **Technology**



Intelligent Operating System (iQ)



**HEPA** filter



Automatic flow control (AFC) technology



Reverse flow air (RFA) technology



Advanced carbon filter (ACF) technology



Patented technology



ProTECT service plan



SureCHECK quality standard

#### Key features of the FumeCAB 1000 iQ

Certified to BS 7989:2001 recirculatory filtration fume cabinet specification

Standard

Reverse flow filter technology Standard **Ensures operational compliance with HSG258 guidelines** Standard

Automatic flow control system
Standard

#### Contact BOFA at https://bofainternational.com/en/contact/

https://bofainternational.com/en/portal/datasheets/fumecab-1000-iq/



Energy saving ultra-bright slim line LED lighting

Standard

Combined HEPA / gas filter incorporating ACF technology

Standard

Real time airflow reading

Standard

High contrast display

Standard

Remote diagnostics via USB

Standard

Side entry blind grommets for equipment access

Standard

Interfacing Optional

Stand Optional

visor Standard

Filters with long life and low replacement cost

Standard

Independent filter condition monitoring, display and warnings

Twin coated anti UV / anti splash protective polycarbonate

Standard

'Run safe' operation

Standard

Large working area

Standard

VOC gas sensor (Volatile Organic Compound)

Optional

**UV** lighting

Optional

Optional filter medias

Optional

#### **Technical specification**

1. iQ display

5. Transparent visor

9. Exhaust

2. On / off switch

6. Hinges

10. Cooling air inlet

3. Filter compartment hinges

7. Mains inlet

11. Standby button

4. Cable entry grommet


8. LED lighting

12. UV lighting (optional)






Left Side / Internal work area

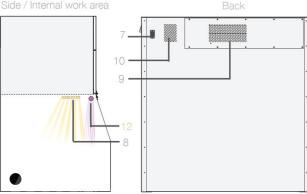



## Internal work area and optional stand

### 13. Stand (optional)

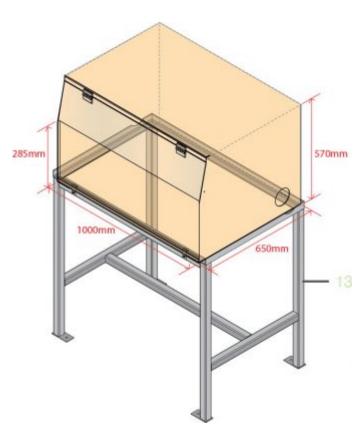

## Airflow through filters



Chemical filter




HEPA filter



Clean air



Contaminated air

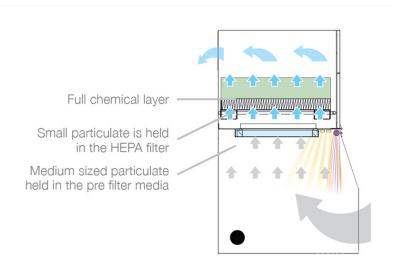

Technical data		
	EU	US
Dimensions (HxWxD)	943 x 1029 x 669mm	37.13 x 40.51 x 26.34"
Opening dimensions (HxWxD)	285 x 1000 x 650mm	11.2 x 39.4 x 25.6"
Cabinet construction	Powder coated mild steel	Powder coated mild steel
Face velocity	0.4m/s	78.7ft/min

Technical data		
Max face velocity	0.6m/s	118ft/min
Electrical data	230v 50/60Hz Full load current: 6 amps	115v 50/60Hz Full load current: 10 amps
Noise level	< 60dBA (At typical operating speed)	< 60dBA (At typical operating speed)
Weight	120kg	264lbs
Exhaust outlet (optional)	125mm	125mm
Approvals	UKCA and CE	UKCA and CE

Pre-filter specifications	
Filter media construction	Filter pad
Filter housing	Cardboard
Filter efficiency	99% @ 0.3 microns

Combined HEPA / gas filter specifications	
HEPA filter media	Borosilicate
HEPA media construction	Pleated with glue bead spacers
Filter housing	Zintec mild steel
Treated activated carbon	17kgs (37.4 lbs)
Filter efficiency	99.997% @ 0.3 microns

Optional stand specifications	
Dimensions (HxWxD)	943 x 1029 x 669mm / 37.1 x 40.5 x 26.3"
Stand construction	Powder coated mild steel

Unit part numbers		
Model	Voltage	Part no.
FumeCAB 1000 iQ Powder coated	230V	E2242A
FumeCAB 1000 iQ Powder coated	115V	E2241A

Replacement filter part numbers	
Model	Part no.
Pre-filter	A1030249
Combined filter	A0130250

#### Datasheet correct at time of publishing.

Where applicable, the carbon used in BOFA units is capable of removing a wide range of VOCs, however it is the responsibility of the user to ensure the carbon is suitable for their application. For specific applications, please contact us for details.

Important Notice: Many factors beyond the control of BOFA can affect the use and performance of BOFA products in a particular application, including the conditions under which the product is used. Since these factors are uniquely within the user's knowledge and control, it is essential the user evaluate the products to determine whether the product is fit for the particular purpose and suitable for the user's application. All products, product specifications, availability and data are subject to change without notice, and may vary by region or country.

Think before you print! Please consider the environment before printing this document.

